


**encore™**  
Hear, There and Everywhere

## Multi-room Audio Distribution System

Quick  
User's Guide

**Linear®**  
Building On Innovation.

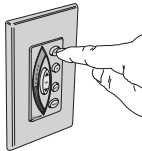

### POWER ON & OFF

#### Keypad Power On

- Press the **POWER** button on the keypad. The keypad will light blue when the power is turned on.

**POWER**

#### Keypad Power Off

- While the keypad is powered, press the **POWER** button on the keypad.

#### Entire System Power Off

- Press and hold the **POWER** button for about three seconds. All keypads in the entire system will power off.

### SOURCE SELECT

#### Changing the Audio Source

- Press the **SOURCE** button on the keypad to change the audio source.
- The source indicators will light to show which audio source is selected; **L** (Local), **1**, **2**, **3**, or **4**.

**SOURCE**

### VOLUME CONTROL

#### Turning the Volume Up or Down

- Press **VOL ▲** to increase the keypad's volume.
- Press **VOL ▼** to decrease the keypad's volume.
- The volume indicators will show the set level. The more indicators lit, the louder the volume.



### AUDIO MUTE

#### Muting the Keypad's Sound

- While the audio is playing, press the **MUTE** button to silence the audio.
- The bottom volume indicator will blink while mute is active.
- Press the **MUTE** button again to return the keypad to its previous volume setting.
- Pressing the **VOL ▲** or **SOURCE** buttons will also return the keypad to its previous volume setting.
- Pressing **VOL ▼** will un-mute the audio and set the keypad to minimum volume level.

**MUTE**

### WHOLE-HOUSE MODE

#### Playing the Same Source at all Keypads

- Press the **SOURCE** button for about three seconds to enter or exit whole-house mode.
- The selected audio source indicator will blink and audio will play at all keypads (volume set by each keypad).
- If a keypad is set for do not disturb, it will not play the source (see back of this card).
- Pressing the **SOURCE** button on any keypad will change the audio source; **1**, **2**, **3**, or **4** for all keypads.
- Audio from local audio wall plates (source **L**) cannot be the whole-house mode source.

**SOURCE**

## DO NOT DISTURB MODE

### Preventing a Keypad from Going Into Whole-house Mode

MUTE

- Press a keypad's **MUTE** button for about three seconds to prevent the keypad from allowing whole-house mode.
- The keypad will flash to display that if whole-house mode is selected by another keypad, this keypad will not participate.
- To allow whole-house mode for the keypad, press the **MUTE** button again for about three seconds.

## EQUALIZER & AUDIO DYNAMICS

### Adjusting the Keypad's Sound

EQ

- Press the **EQ** button to enter equalizer adjustment mode. Press **EQ** again to exit.
- Equalizer adjustment mode automatically exits after 30 seconds of keypad inactivity.
- The source indicators will light up, then one will flash to indicate that the keypad is in equalizer adjustment mode.
- Use the **SOURCE** button to cycle through the five adjustment modes.

SOURCE

## EQUALIZER - BASS ADJUST

### Bass Adjust

- In EQ adjust mode, when source indicator 1 is flashing, the keypad is in bass adjust mode.
- The center volume indicator will light, showing a "flat" adjustment for the bass, no bass increase or decrease.
- Use the **VOL ▲** and **VOL ▼** buttons to adjust the bass level. Lit indicators above the center show more bass. Lit indicators below the center show less bass.

VOL

VOL

VOL

## EQUALIZER - TREBLE ADJUST

### Treble Adjust

- In EQ adjust mode, when source indicator 2 is flashing, the keypad is in treble adjust mode.
- The center volume indicator will light, showing a "flat" adjustment for the treble, no treble increase or decrease.
- Use the **VOL ▲** and **VOL ▼** buttons to adjust the treble level. Lit indicators above the center show more treble. Lit indicators below the center show less treble.

VOL

VOL

VOL

## EQUALIZER - BALANCE ADJUST

### Balance Adjust

- In EQ adjust mode, when source indicator 3 is flashing, the keypad is in balance adjust mode.
- The center volume indicator will light, showing a "center" adjustment for the balance, no extra left or right.
- Use the **VOL ▲** and **VOL ▼** buttons to adjust the balance. Lit indicators above the center show more right balance. Lit indicators below the center show more left balance.

VOL

VOL

VOL

## EQ LOUDNESS OR LIMITER ON & OFF

### Loudness On/Off or Limiter/Compressor On/Off

- In EQ adjust mode, when source indicator 4 is flashing, the keypad is in loudness setting mode.
- In EQ adjust mode, when source indicator L is flashing, the keypad is in limiter/compressor mode.
- Loudness adds extra bass. Limiter/compressor automatically limits volume.
- Use the **VOL ▲** button to turn the option on (top volume indicator lights).
- Use the **VOL ▼** button to turn the option off (bottom volume indicator lights).

VOL

VOL

VOL