




# SUPER STATION

## Operation and Installation Instructions

The six (6) function Super Station (Deluxe Wall Pushbutton Station) replaces a standard doorbell-type pushbutton to allow you to integrate fully with all the convenience and security features built into your 6000 Series Allstar Residential Vehicular Garage Door Operator.

- Operator Open Pushbutton** — Green-backlighting, arrow pointing up. Used to start the door upward. This button will also stop and reverse a door that is closing. The button has no effect on a door that is opening. The function of this pushbutton is automatically disabled when the Security slide switch is set to the “ON” position and the door is fully closed.
- Operator Close Pushbutton** — Green-backlighting, arrow pointing down. Used to start the door downward. This button has no effect on a door in motion.
- Operator Stop Button** - Red-backlighting, universal “STOP” within an octagon. Used to stop a door in motion. This button has no effect on a door that is stopped.
- Operator Light Pushbutton** —Yellow-backlighting, “Sun” symbol. Turns the operator light on and off, but does not activate the door operator. The operator light will stay on until turned off using this pushbutton, or until door operation is initiated, which overrides the function of this pushbutton and automatically turns the light off after 4-1/2 minutes.
- Security Switch** — Prevents unwanted door operation from pushbutton, key switches, keyless entry systems, radio controls, etc. When the Security Switch is moved to the ON position (towards “locked” symbol), with the garage door fully closed, signals from all of these devices are locked out by the operator. Such devices will continue to work until the door is fully closed, allowing you to set the switch (when leaving on vacation, for example), leave the garage and close the door remotely.

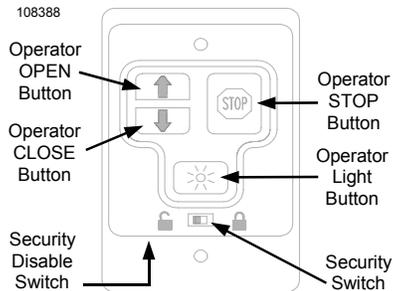

(NOTE: YOU WILL NOT BE ABLE TO OPEN YOUR GARAGE DOOR USING RADIO CONTROLS OR EXTERIOR ACCESS CONTROLS UNTIL THE SECURITY SWITCH IS RETURNED TO THE OFF POSITION (“unlocked” symbol). THIS MUST BE DONE FROM INSIDE THE GARAGE.) When the Security Switch is engaged, the green lighting behind the Open/Close Pushbuttons is extinguished as an indication.

- Security Disable Switch** - located under and to the left of the Security Switch. Disables the Security Switch feature. Use if the garage door is the only entryway to the garage.


The Super Station (Deluxe Wall Pushbutton Station) is an **optional accessory** designed to work with any Allstar 6000 Series Residential Vehicular Garage Door Operator. Connection to any other operator may damage the operator and/or the Super Station. Only connect one operator to each Super Station. Do not connect more than one Super Station to an Operator. Follow the steps below to install.

**STEP 1:** After determining a suitable location, usually near the access door and at least 5 feet above the floor to prevent use by children, use the Super Station as a guide to mark the mounting holes. Drill holes for drywall anchors or screws. NOTE: Do not mount directly to masonry walls. Use backer board. The Super Station is also designed to be mounted directly to a standard single electrical box.

**STEP 2:** A length of 2-conductor, #22 gauge wire is required to connect the Super Station to the garage door operator. Strip approximately 6” of the wire jacket from one end and 1/2” of insulation from each wire. Carefully connect one wire to each of the two terminals indicated, noting which color is connected to which terminal. Tighten screws, being careful that no wires are allowed to touch any other terminal or any other conductive part of the circuit board. Do not overtighten the terminal screws.

**STEP 3:** Push the wire jacket into one of the two notches provided at the ends of the housing, allowing a maximum of 1/8” inch of the jacket inside the case (too much will make mounting difficult). Carefully tuck the loose wires into the case and mount the unit using the screws provided.

**STEP 4:** Run the wire from the Super Station to the operator, supporting it at 18” intervals with suitable staples. Leave a sufficient length to make the necessary connections to the operator terminal strip.

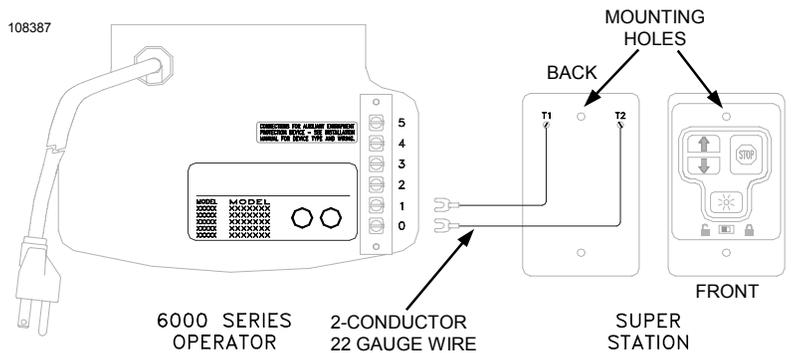

**WARNING: SOME LOCAL BUILDING CODES DO NOT ALLOW SURFACE WIRING. BE SAFE AND CHECK WITH YOUR LOCAL BUILDING INSPECTOR FIRST.**

**STEP 5:** Disconnect the power from the operator. Strip approximately 4” of jacket from the end of the wire and 1/2” insulation from each wire. Connect to terminals 0 and 1 as shown in the illustration above. Support the wire near the operator with wire ties.

**STEP 6:** Reconnect power to the operator and test the Super Station functions as described per the above operating parameters.

### Warranty Statement

**Manufacturer's Limited Warranty**

Allstar warrants its Deluxe Wall Station to be free from defect in material and workmanship for a period of one (1) year from the date of purchase. To obtain service, contact your dealer.

To obtain service under this warranty the buyer must obtain authorization instructions for the return of any goods from Allstar before returning the goods. The goods must be returned with complete identification, with copy of proof-of-purchase, freight prepaid and in accordance with Allstar's instructions or they will not be accepted. In no event will Allstar be responsible for goods returned without proper authorization or identification.

Goods returned to Allstar for warranty repair within the warranty period, which upon receipt by Allstar are confirmed to be defective and covered by this limited warranty, will be repaired or replaced at Allstar's sole option, at no cost and returned pre-paid. Defective parts will be repaired or replaced with new or factory rebuilt parts at Allstar's sole option.

This limited warranty does not cover non-defect damage, damage caused by unreasonable use, damage caused by improper installation or care, vandalism or lightning, fire or excessive heat, flood or other acts of God (including, but not limited to misuse, abuse or alterations, failure to provide reasonable and necessary maintenance), labor charges for dismantling or reinstalling a repaired or replaced unit, or replacement batteries.

These warranties are in lieu of all other warranties, either expressed or implied. All implied warranties of merchantability and/or fitness for a particular purpose are hereby disclaimed and excluded. Under no circumstances shall Allstar be liable for consequential, incidental or special damages arising in connection with the use or inability to use this product. In no event shall Allstar's liability for breach of warranty, breach of contract, negligence or strict liability exceed the cost of the product covered hereby. No person is authorized to assume for Allstar any other liability in connection with the sale of this product.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Warranty effective after May 15th, 1997.

For Information:

Phone 610-436-6190 FAX 610-344-0210