

MVP Transmitter Installation for 2 & 3 Door Applications

Program All Transmitters Before Teaching the Operator the transmitter code. All transmitters must be programmed with the same code. The first eight positions may be any combination of **+**, **0** or **-**. **The 9th position must be a +**. Enter a code in the table below.

SWITCH/CODE POSITION								
1	2	3	4	5	6	7	8	9
								+

THE FOLLOWING SEQUENCE WILL SET THE CODE FOR ALL THREE BUTTONS OF THE TRANSMITTER

1. Press and **hold the + button**. The RED LED will turn on.
2. While continuing to hold the **+** button, press and **hold the - button**. Continue to hold both the **+** and **-** buttons until the LED starts to blink.
3. When **the LED starts blinking immediately release the + and - buttons**. The LED will **blink two times** and then remain on to confirm programming mode.
4. While the LED is on, **press and release the + button**. The LED will blink off once and then remain on.
5. **Enter the 9-digit code** from the table. Every time a button is pressed the LED will blink off and on.
6. After the 9-digit code is entered, the **LED will blink twice** to confirm a valid code and remain off.
7. Repeat the procedure for the remaining transmitters. All transmitters will have identical codes.

After the transmitter codes are set, teach each MVP head unit one transmitter button. Facing the garage, the **+** button will operate the left door, the **0** button will operate the center door and the **-** button will operate the right door. Once the MVP has learned the code from one transmitter, programmed per the sequence listed above, all transmitters will operate all doors.

THE FOLLOWING SEQUENCE WILL TEACH THE OPERATOR ONE BUTTON OF THE TRANSMITTER ONLY USE ONE TRANSMITTER FOR THE FOLLOWING SEQUENCE

For the LEFT DOOR, USE the + BUTTON on the transmitter

1. **Press and hold the learn button** on the Super Station for approximately **five seconds**. The RED LED on the rear panel of the operator and the work light will turn on and then turn off. **IMMEDIATELY release** the learn button **when** the LED and the **work light turn off**. This erases any previously learned code.
2. **Press and quickly release the learn button** on the Super Station. The RED LED on the rear panel of the operator and the work light will turn on. The operator is ready to learn a transmitter code.
3. **Press the + button on the transmitter**. When the code is learned, the RED LED and the work light will turn off.

For the CENTER DOOR, USE the 0 BUTTON on the transmitter

1. **Press and hold the learn button** on the Super Station for approximately **five seconds**. The RED LED on the rear panel of the operator and the work light will turn on and then turn off. **IMMEDIATELY release** the learn button **when** the LED and the **work light turn off**. This erases any previously learned code.
2. **Press and quickly release the learn button** on the Super Station. The RED LED on the rear panel of the operator and the work light will turn on. The operator is ready to learn a transmitter code.
3. **Press the 0 button on the transmitter**. When the code is learned, the RED LED and the work light will turn off.

For the RIGHT DOOR, USE the - BUTTON on the transmitter

1. **Press and hold the learn button** on the Super Station for approximately **five seconds**. The RED LED on the rear panel of the operator and the work light will turn on and then turn off. **IMMEDIATELY release** the learn button **when** the LED and the **work light turn off**. This erases any previously learned code.
2. **Press and quickly release the learn button** on the Super Station. The RED LED on the rear panel of the operator and the work light will turn on. The operator is ready to learn a transmitter code.
3. **Press the - button on the transmitter**. When the code is learned, the RED LED and the work light will turn off.