

Alstar c.p. ALLSTAR CORPORATION
 PO Box 240
 Downingtown, PA 19335

TOLERANCE (DECIMAL)
 X.X ±0.030
 X.XX ±0.020
 X.XXX ±0.010

FRACTIONAL ±1/32
 ANGULAR ±1°

APPROVED BY: SCALE: 1:1
 DATE: 09.16.05
 SHT: 3 OF 6
 MATERIAL: N/A
 TITLE: Wiring Diagram, CAP Start Motor, CDD MCB, 2005


DRAWN BY: DCG
 DATE: 09.16.05
 REV: B

DWG NO.: 112757

OPERATING MODES SWITCH SETTINGS

MODE	S1	S2	S3	S4
C2	OFF	OFF	OFF	OFF
B2	ON	OFF	OFF	OFF
D1	OFF	ON	OFF	OFF
E2	ON	ON	OFF	OFF
TS	OFF	OFF	ON	OFF
T	ON	OFF	ON	OFF

ON BOARD OPEN/CLOSE/STOP CONTROL BUTTONS

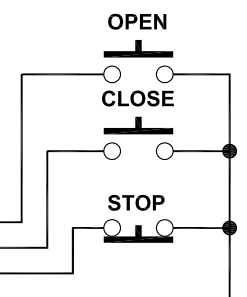

* REMOVE FACTORY JUMPER IF USING NC REV INPUT

SINGLE PHASE CAPACITOR START MOTOR - 120 VAC