



1) Mount lower enclosure and attach to studs

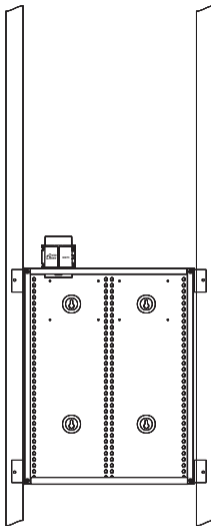

2) Snap in H271(s)

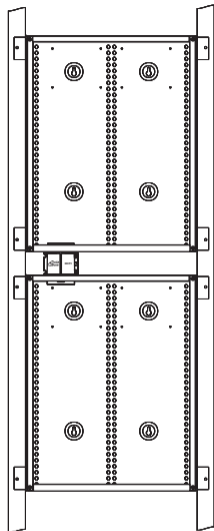

3) Lower top enclosure onto H271 and attach to studs